

# Inspired, Effortless Shade









Trusted for over 25 years



New Zealand Innovation



Eco-friendly Production

## SHADOWSPEC RETREAT<sup>™</sup> Wall Mounted Umbrella

### **Patented & Trademarked Technology**

#### Clever shade for compact spaces.


The Shadowspec Retreat<sup>™</sup> is built from sleek, modern materials. We've handpicked the world's best to ensure longevity. Anodised Aluminium and 316 Stainless Steel work in harmony with our in-house design philosophy.



SHADOWLIFT™ Gas-assisted deployment for an easy lift.



**SHADOWREACH™** Extend for maximum shade reach.

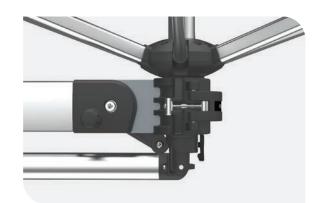

SHADOWROLL™ Integrated roller allows smooth deployment.



SHADOWTILT™ Protects from low-angled sun rays.

#### **Follow the sun**



ROTATES Allows shade for the duration of the day.





Two tilt positions to protect when the sun is low.

**EXTENDS** Away from the wall.

TILTS



## Canopy

#### Designer colours to enhance and inspire your space.

Solution-dyed, fade resistant and UPF 80 rated to provide UV protection year round, backed up by extensive warranties. Available in 5 classic colours: Oyster, Alpine Stone, Charcoal Tweed, Rust and Black & White Stripe.




3 YEAR

Fabric


Warranty\*



Oyster



Alpine Stone





Rust



Black & White Stripe







Oil and Stain Repellent



On-Trend Colours



Mould and Mildew Resistant



Solution-dyed, **High Colour Fastness** 



Easy Clean



UV and Fade Resistant



Water Resistant



Protection

Chlorine Resistant



Eco-friendy Production




Tear Resistant



Breathable Weave



#### **Shadowspec Retreat Dimensions**

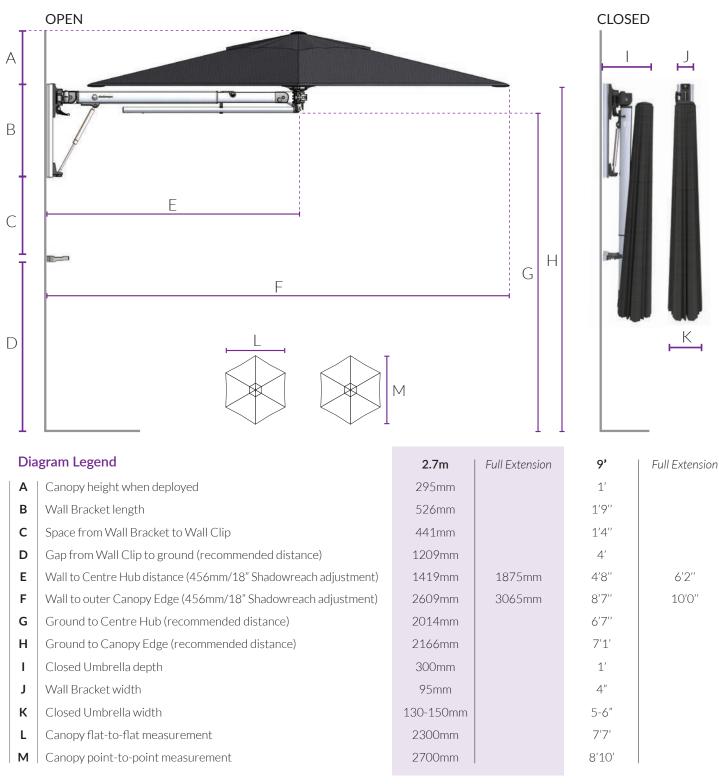

#### Note: Fastenings are not supplied for the Wall Mount Bracket.

All sizings and conversions are +/- 2.5mm / 1/16" and are subject to change without notice. We recommend commerical installations use metric measurement for any umbrella spacing to ensure accuracy. The above dimensions make the assumption that you have installed your umbrella at the recommended installation height on your wall. If you have installed your Retreat lower or higher than recommended, you will need to add that difference to the above measurements.

